


Verwisselen filterpatroon CLEO Aquafun wateronthardingsfilter AF-1

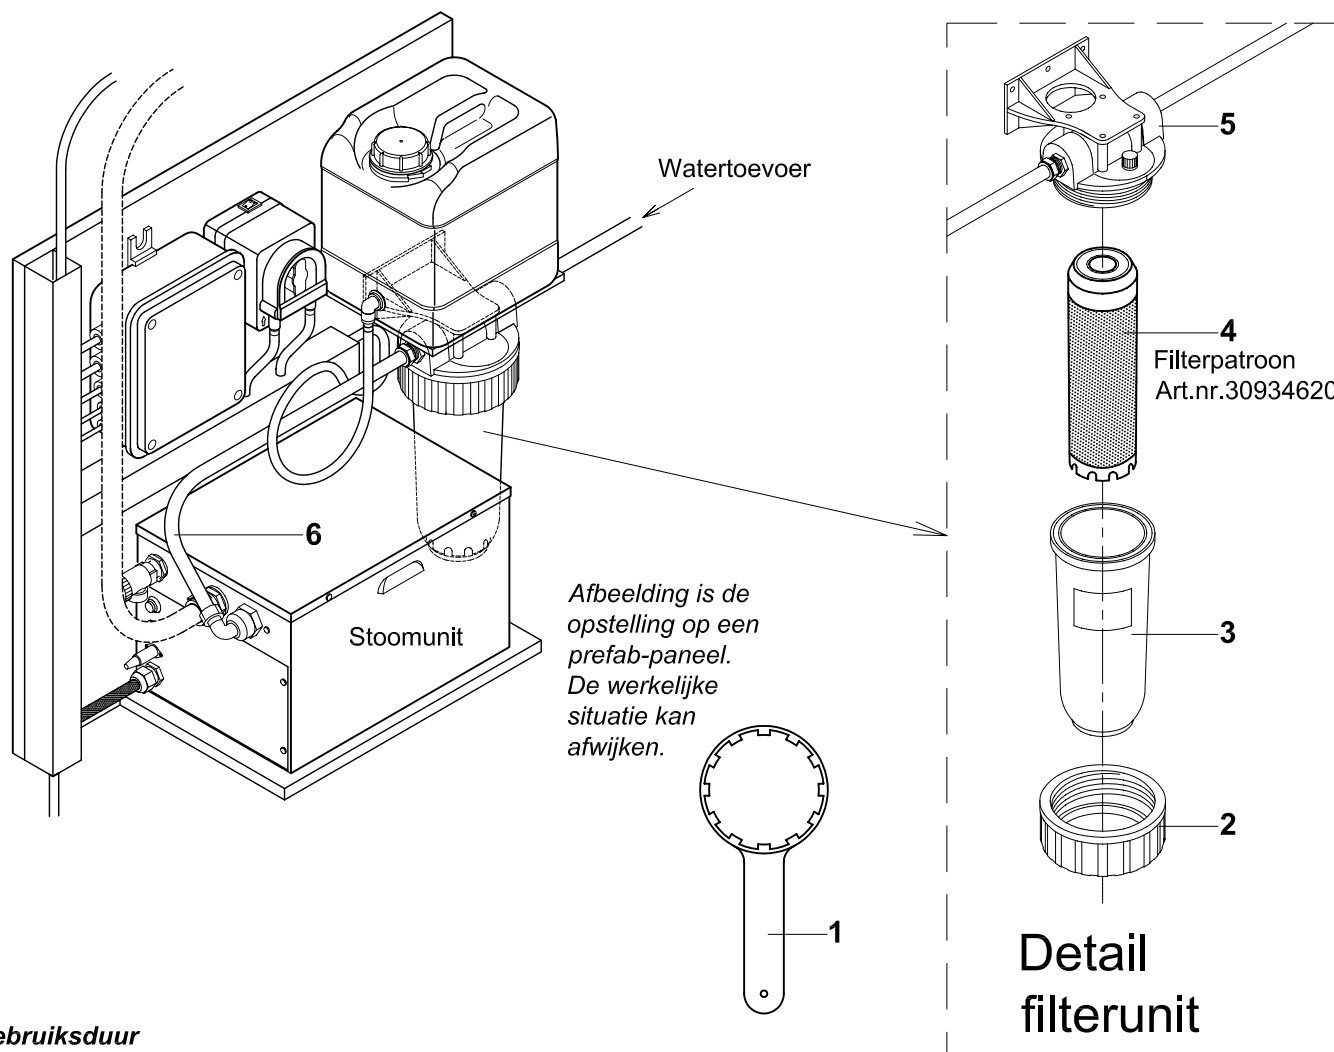

Gebruiksduur

Het filter is gebaseerd op gemiddelde waarden voor:

- watergebruik
- waterleidingdruk
- waterhardheid
- gebruiksfrequentie stoomunit

Er is geen indicatie als het filterpatroon uitgewerkt is.

De capaciteit van een patroon is voldoende voor de behandeling van gemiddeld 450 liter water. Jaarlijkse vervanging van het filterpatroon is daarom noodzakelijk om van een goede werking van het onthardingsfilter verzekerd te zijn.

LET OP! De volgende werkzaamheden dienen te worden uitgevoerd door een vakbekwame installateur.

Vervangings instructies

Sluit de watertoevoer af en plaats indien mogelijk een opvangbak onder de filterunit voor het opvangen van lekwater. Draai met het daarvoor bestemde gereedschap(1) de bevestigingsring(2) los en verwijder de filterbeker(3) met patroon(4) en giet de beker leeg. Reinig de filterbeker en plaats het nieuwe filterpatroon. **LET OP!** (Blauwe) pakkingring aan bovenzijde. Plaats de filterbeker met patroon tegen de onderzijde van het aansluithuis(5) en breng de bevestigingsring(2) aan. Draai de bevestigingsring vast met het daarvoor bestemde gereedschap(1).

Spoelen van het filterpatroon

Voor een optimale werking dient het filterpatroon te worden gespoeld voor ingebruikname.


Koppel voor het opvangen van het spoelwater leiding(6) los van de stoomunit.

Plaats een opvangbak onder het losgekoppelde einde van de leiding(6) en sluit de watertoevoer aan. Het spoelwater kan eerst een bruinige tint vertonen, dit is normaal. Spoel tot het spoelwater helder is (gemiddeld na ca. 10 Liter).

Sluit de watertoevoer af en koppel leiding(6) weer aan de stoomunit.

Het filter is nu klaar voor gebruik. Sluit de watertoevoer weer aan.

Replacement of the filtercartridge CLEO Aquafun watersofteningfilter AF-1

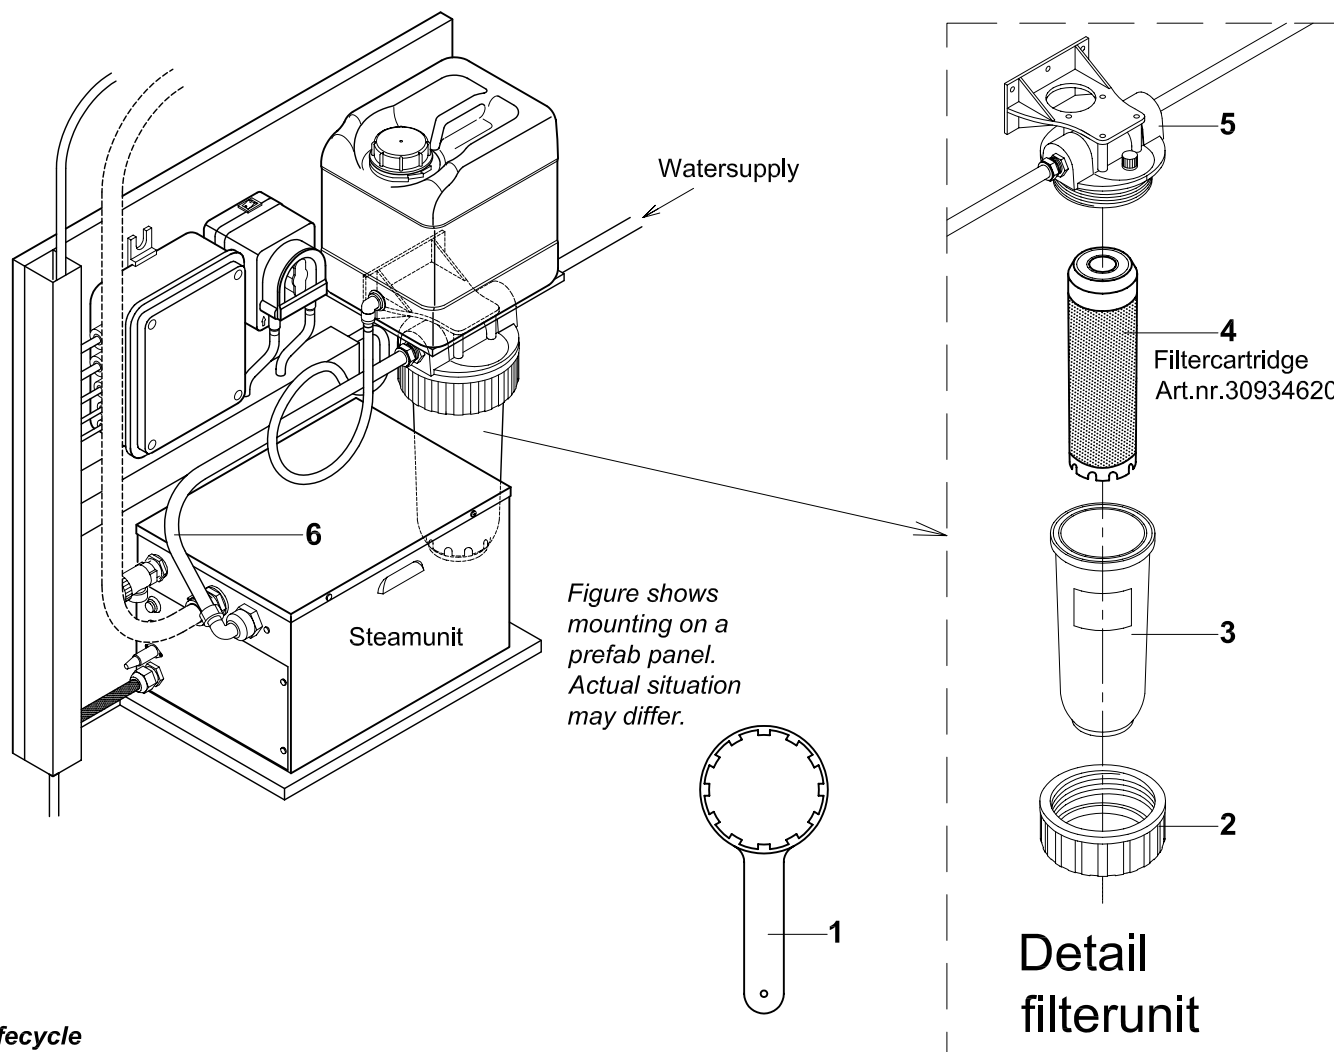

Lifecycle

The filter is based on average values for:

- wateruse
- water pipe pressure
- watersoftness
- steamunit frequency of use

There is no indication when the filtercartridge is elaborated.

The capacity of a cartridge is sufficient for the treatment of about 450 liters water. A yearly replacement of the cartridge is therefore necessary for a correct operation of the filterunit.

ATTENTION! Following operations are to be executed by skilled personnel.

Replacement instructions

Cut off the watersupply and place, if possible, a reception container underneath the filterunit to catch leaking water. Release the ringnut(2) with the plastic tool(1) and remove the filtercup(3) with cartridge(4). Remove the water and clean the cup. Place the new filtercartridge. **ATTENTION!** (Blue coloured) gasket on top. Place the filtercup with cartridge on the bottomsides of the housing(5) and fasten the ringnut(2) with the plastic tool(1).

Rinse the filtercartridge

For optimal operation the filtercartridge has to be rinsed before operation.

Detach pipe(6) from the steamunit in order to catch the rinsewater.

Place a reception container underneath the pipe(6)end and turn on the watersupply. The rinse water can have a brown shade at first but this is normal. Rinse till the water is clear (after about 10 Liters average).

Cut off the watersupply and reconnect pipe(6)end to the steamunit.

The filterunit is now ready for use. Turn on the watersupply.